

HYUNDAI R140LC-9 CRAWLER EXCAVATOR

Service Repair Manual

[DOWNLOAD NOW](#)

Service Manual Contents:

SECTION 1 GENERAL

- Group 1 Safety Hints
- Group 2 Specifications
- Group 3 Operation Checkout Record Sheet

SECTION 2 ENGINE

- Group 1 Structure and Function
- Group 2 Fuel warmer system
- Group 3 Engine speed & stall rpm
- Group 4 Fan drive circuit for cooling system

SECTION 3 POWER TRAIN SYSTEM

- Group 1 Structure and Function
- Group 2 Operational Checks and Troubleshooting
- Group 3 Test and Adjustments
- Group 4 Disassembly and Assembly

SECTION 4 BRAKE SYSTEM

- Group 1 Structure and Function
- Group 2 Operational Checks and Troubleshooting
- Group 3 Test and Adjustments
- Group 4 Disassembly and Assembly

SECTION 5 STEERING SYSTEM

- Group 1 Structure and Function
- Group 2 Operational Checks and Troubleshooting
- Group 3 Test and Adjustments
- Group 4 Disassembly and Assembly

SECTION 6 WORK EQUIPMENT

- Group 1 Structure and Function
- Group 2 Operational Checks and Troubleshooting
- Group 3 Test and Adjustments

Group 4 Disassembly and Assembly

SECTION 7 ELECTRICAL SYSTEM

Group 1 Component Location

Group 2 Electrical Circuit

Group 3 Monitoring System

Group 4 Electrical Component Specification

Group 5 Connectors

Group 6 Troubleshooting

Operating Manual Contains:

FOREWORD

SECTION 1 SAFETY HINT

Group 1 Before operating the machine

Group 2 During operating the machine

Group 3 During maintenance

Group 4 Parking

SECTION 2 SPECIFICATIONS

Group 1 Major components

Group 2 Specifications

Group 3 Weight

Group 4 Specification for major components

SECTION 3 CONTROL DEVICE

Group 1 Cab device

Group 2 Cluster

Group 3 Switches

Group 4 Control device

Group 5 Air conditioner and heater

Group 6 Others

SECTION 4 OPERATION

Group 1 Suggestion for new machine

Group 2 Check before starting the engine

Group 3 Starting and stopping the engine

Group 4 Warming-up operation

Group 5 Operation of the working device

Group 6 Travalng of the machine

Group 7 Efficient working method

Group 8 Adjustment of the work equipment

Group 9 Operation in the special work sites

Group 10 Storage

SECTION 5 TRANSPORTATION

- Group 1 Road traveling
- Group 2 Preparation for transportation
- Group 3 Loading the machine
- Group 4 Fixing the machine
- Group 5 Loading and unloading by crane
- Group 6 Towing the machine

SECTION 6 MAINTENANCE

- Group 1 Instructions
- Group 2 Tightening torque
- Group 3 Specification of fuel, coolant and lubricants
- Group 4 Maintenance check list
- Group 5 Maintenance chart
- Group 6 Service instruction
- Group 7 Electrical system
- Group 8 Air conditioner and heater

SECTION 7 TROUBLESHOOTING GUIDE

- Group 1 Engine
- Group 2 Electrical system
- Group 3 Power train System
- Group 4 Hydraulic system

INDEX